

Tempist


Mini 2 Zone

– Quick Start Guide –

1. Plug in the unit with the included micro usb power supply. The Tempist Unit will then create a wifi network that begins with “Tempist-”



3. Search for the new Wi-Fi network named “Tempist” on your laptop, phone, or tablet. The Unit will automatically open a configuration screen.

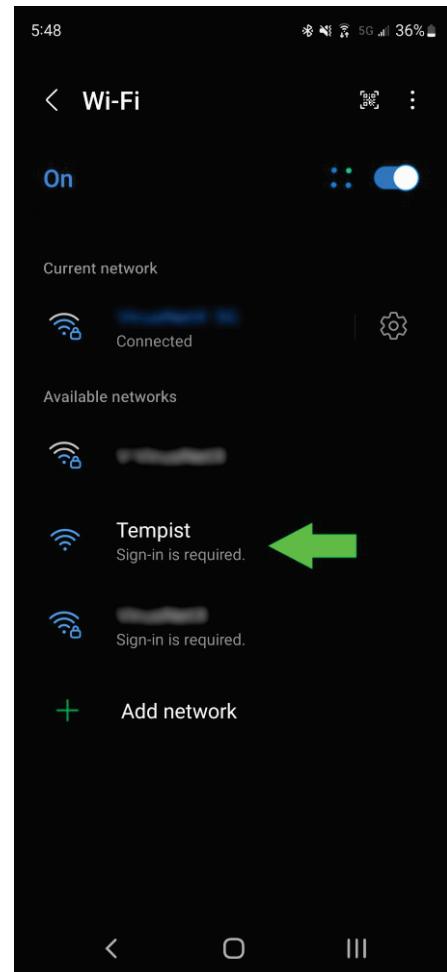


Tempist

– Quick Start Guide –

Important Note for Older Devices


(If a window does not automatically open after connecting. Use 192.168.4.1 in your browser to connect manually)

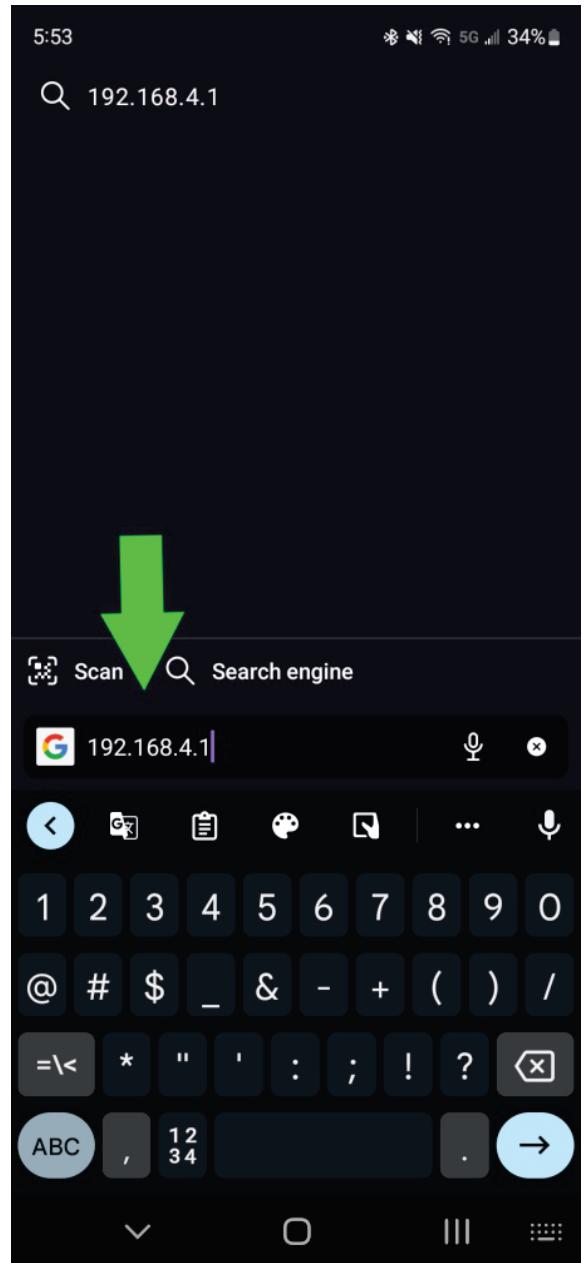

Tempist


– Quick Start Guide –

5. Click, “Configure WiFi”

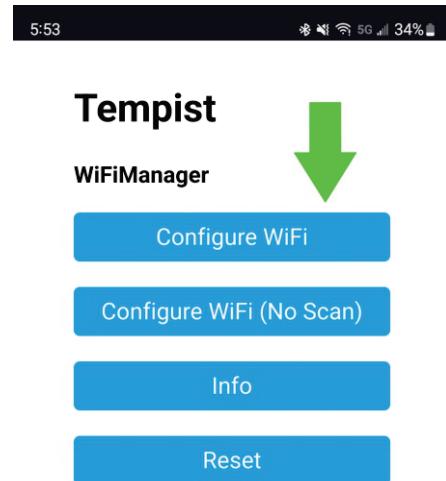

1. This is the list of networks that the Tempist Unit can hear. The strongest are always listed first. Connect to your preferred network.

(2.4ghz only)

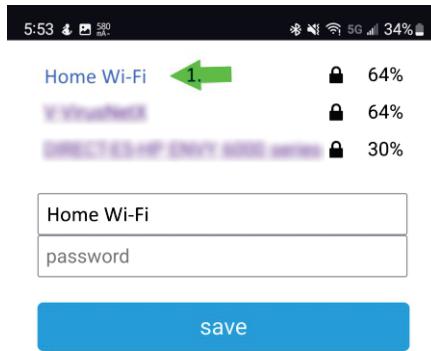


Scan

Tempist



– Quick Start Guide –

7. Enter the password, and hit “Save”

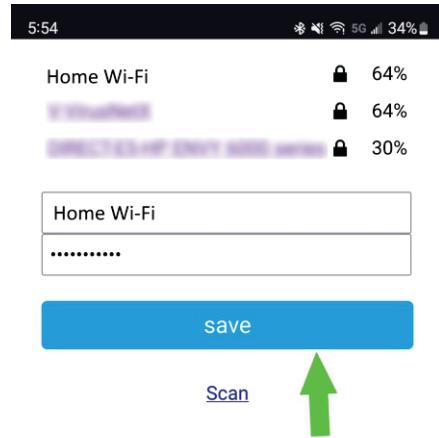

Now your unit has saved your credentials. It will now reboot and always connect when this entered Access point is available

If for some reason this Access Point is not in range in the future, the Tempist mini unit will restart this config screen so you can connect to another Wi-Fi

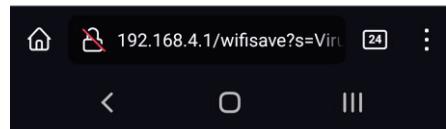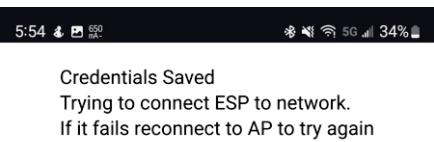

Tempist

– Connecting to TempistHub.com –

1. After connecting to wifi successfully, open your wifi settings and look for “Tempist Settings”.

2. Connect to Tempist Settings

3. A window will appear. at the top of the window your TEMP ID will appear. In the format of TEMP-XXXXXX. Record this ID for the future. This is the permant ID of your unit on the TempistHub Network.

4. Login to www.TempistHub.com

5. Register your account for the first time

6. Enter your TEMP-ID#. This will bond your unit to your email.

7. Purchase a subscription if not included with your unit or boiler.

8. Enjoy! Your unit should now be connected.



Welcome Back...!

Email

Enter your email

Password

Enter your password

Login

[Don't have an account? Register](#)

[Forgot Password?](#)



Welcome!

Thank you for purchasing a Tempist product. Please register below to start using your device.

Email Address

Enter your email address

Password

Enter your password

TEMP-ID #

e.g., TEMP-ABC123

Installation Address (Optional)

e.g., 123 Main St, City, Country

Do you have a boiler Serial number or coupon code?

Installation Type

Water Heater

Register

Tempist


– Important Notes –

To install the sensors, or just zip tie your sensors to your inlet and outlet!

(Make sure to adjust the Install Type appropriately in the menu)



Affix sensors

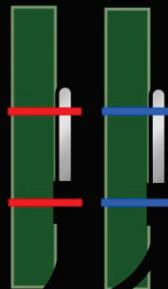

Questions?

Please visit www.Tempist.net for a 2 minute instructional video, or contact support at, support@tempist.net

Need phone support? Schedule a time on our website.

[We want thank you for your purchase](#)