


Tempist

– Quick Start Guide –


1. Plug in the unit with the included micro usb power supply. The Tempist Unit will then light up and display a boot screen.



2. When “Connecting to Wifi” appears, the unit is attempting to connect to your local Wi-Fi. If this is the first time, connect to the unit from your phone, or laptop under the SSID of “Tempist”

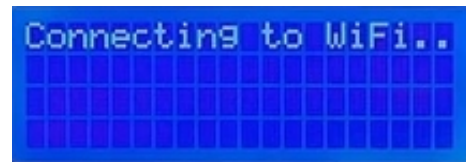


3. Search for the new Wi-Fi network named “Tempist” on your laptop, phone, or tablet.

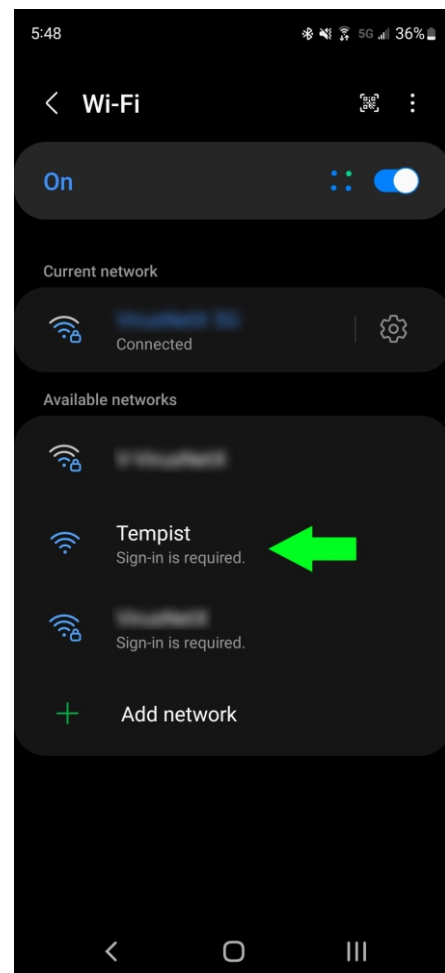

Tempist

– Quick Start Guide –



4. Open a web browser and in the address bar, type 192.168.4.1 and then navigate to the web setup page.

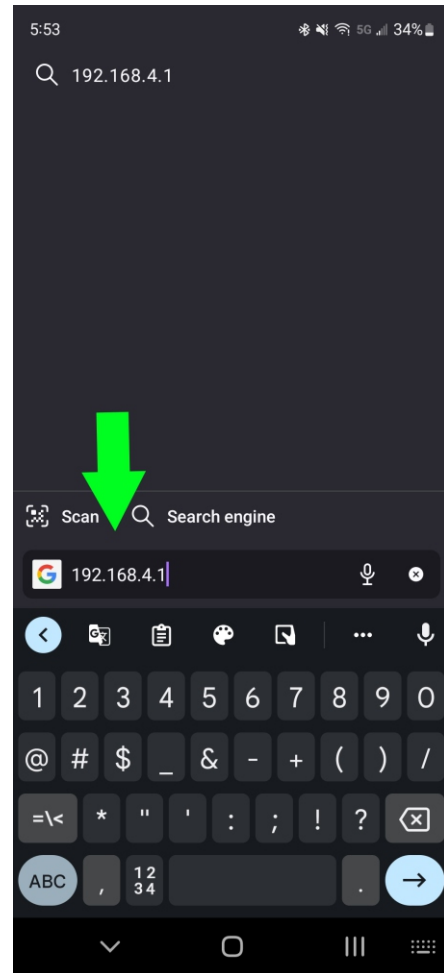

Tempist


– Quick Start Guide –

5. Click, “Configure WiFi”

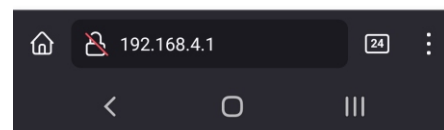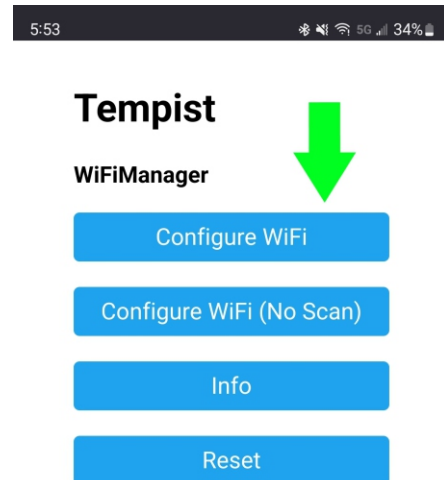

6. This is the list of networks that the Tempist Unit can hear. The strongest are always listed first. Connect to your preferred network.


(2.4ghz only)

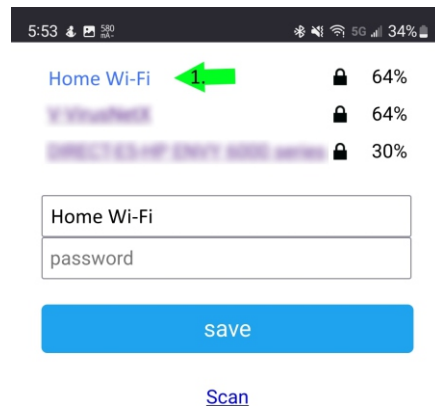

Tempist



– Quick Start Guide –

7. Enter the password, and hit “Save”

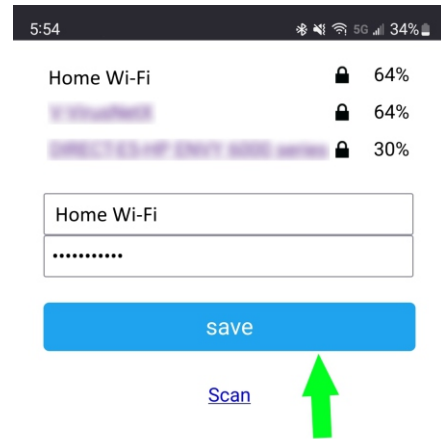

8. Now your unit has saved your credentials. It will now reboot and always connect when this entered Access point is available.

If for some reason this Access Point is not in range or the password has changes, the unit will display the temperature per usual after a 3 minute timeout.

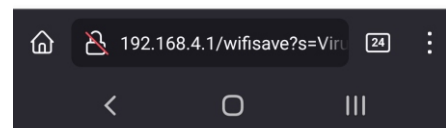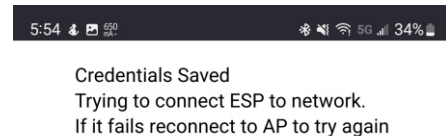

Tempist

– Quick Start Guide –

9. After the reboot mentioned before, the Unit will display its assigned address by your router.

Enter this address into a web browser while on the same network to check the temperature.



```
WiFi connected!
Your IP address is:
10.0.0.180
```

10. Now you are connected to your Tempist Temp Unit!



7:53 63%

Tempist
Temp
Monitor
In Temp
170.82 °F

Out Temp
160.59 °F

 ΔT
-10.24 °F

Tempist

– Important Notes –

There are two ways to move through the menus.

Short Press: >1 Second Press

Long Press: <1 Second Press



Long Press, to open the menu

When inside the menu screen

Short Press, to scroll down the list

Long Press, to change a setting



Three install options are available,

- Thermowell/Direct (No offset added 1:1)
- ThermoPex (Offset Profile Added)
- Brass (Offset Profile Added)




Tempist

– Important Notes –

To install the sensors, just zip tie your sensors to your inlet and outlet!

(Make sure to adjust the Install Type appropriately in the menu)

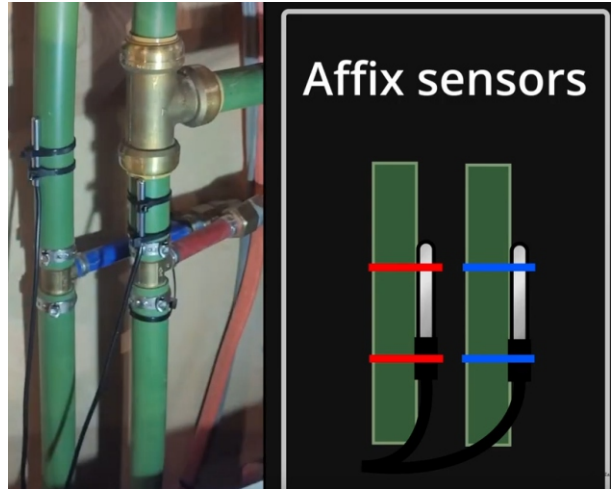

Questions?

Please visit www.Tempist.net for a 2 minute instructional video,
or contact support at, support@tempist.net

We want thank you for your purchase